


UNITREE G1

Startup, shutdown and packing

Beginner operator training



G1 at a glance

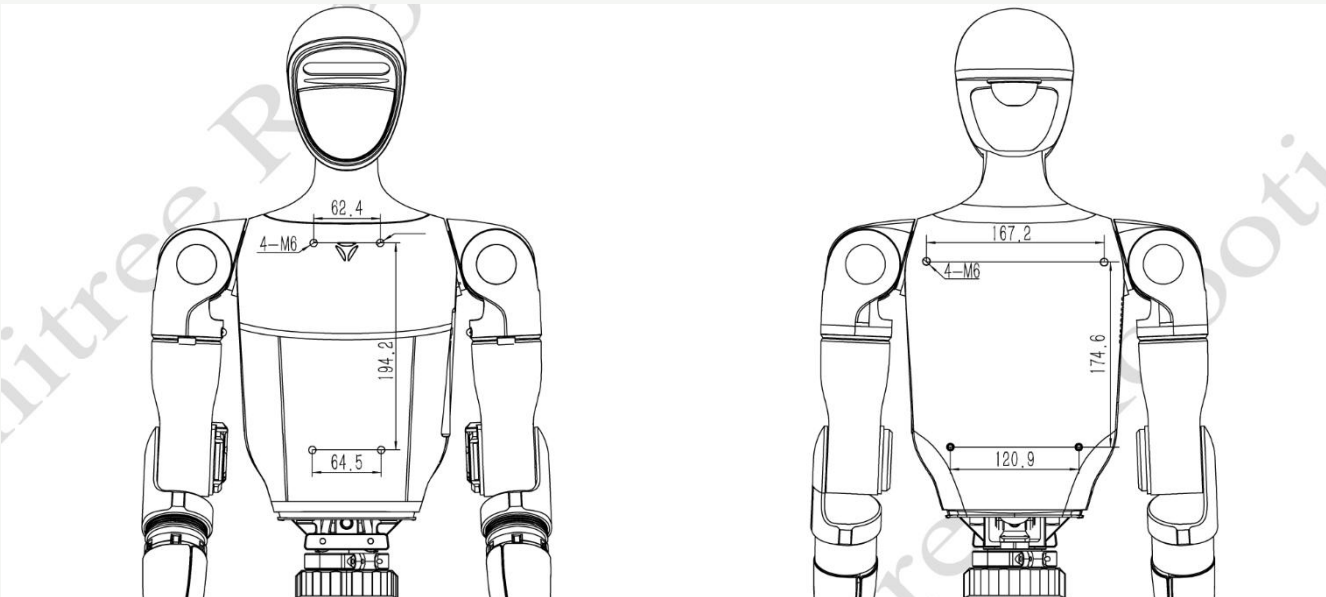

Humanoid structure

Head, torso, arms, hands, legs and feet move as one system.

Rear battery

The battery and its power key sit on the back of the robot.

Operator control

This training uses the handheld controller for posture commands.

Controller overview



X / A / B

Posture commands use the right-hand face buttons.

L2 shoulder key

Hold L2 while pressing the required face button.

Power key


Located on the lower front edge.

Checks before startup

- | | | |
|----|--------------------------|--|
| 01 | Clear area | Remove people, chairs, cables and other obstacles. |
| 02 | Level surface | Use a flat floor with enough room around the robot. |
| 03 | Robot condition | Check the shell, joints and cables for visible damage. |
| 04 | Power condition | Confirm the battery is secure and the controller has charge. |
| 05 | Operator position | Keep hands clear of joints when power is applied. |

Stop if the robot's state or posture is unclear.

Face-up starting position

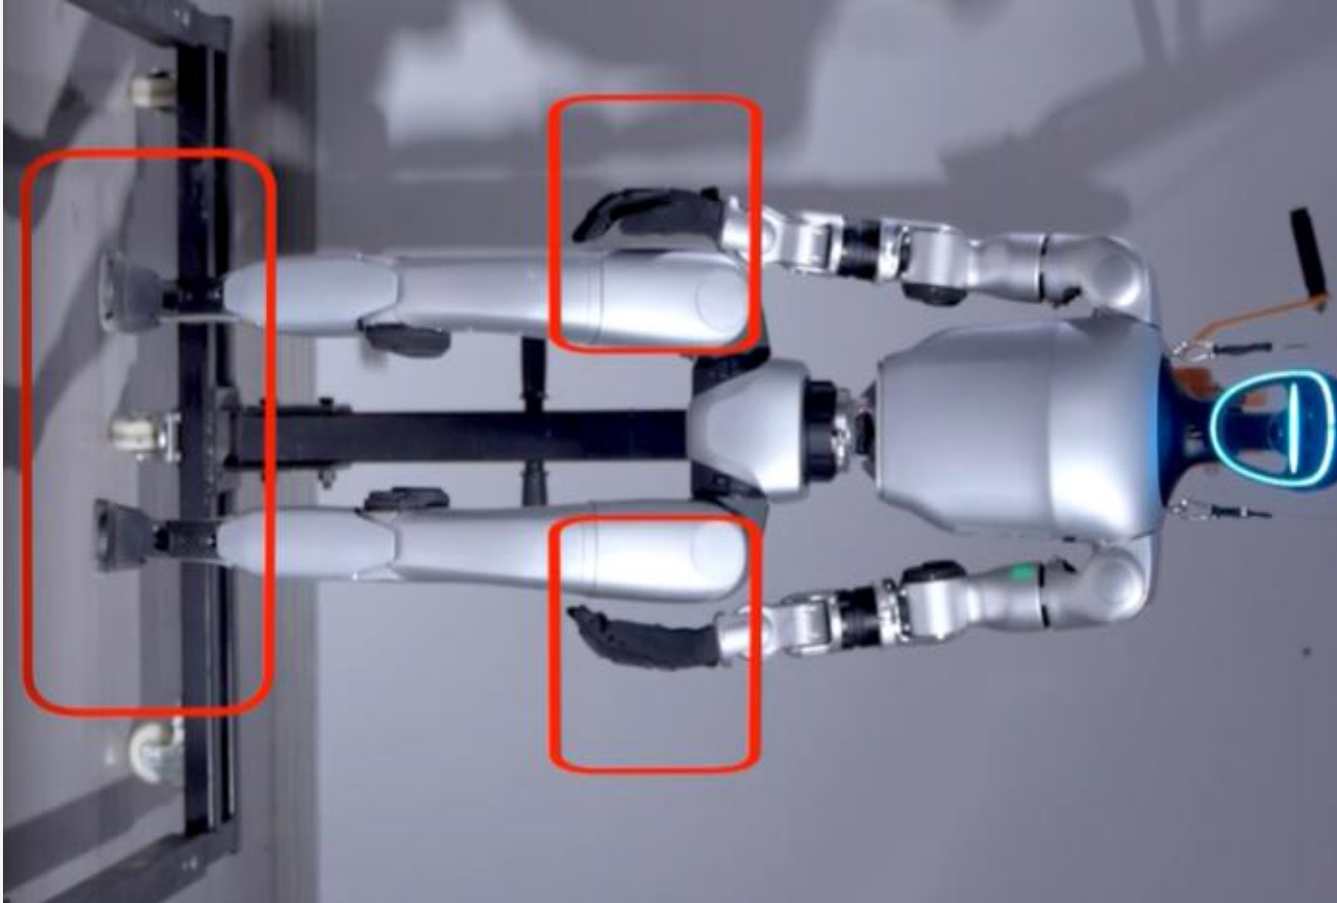

Face up

Place the back and head support on the floor.

Arms clear

Keep both arms away from the torso and joints.

Legs aligned

Extend the legs without crossing the feet.

Robot power-on

01 Battery seated

Insert in the correct direction until the latch clicks.


02 Short press

Press the battery power key once.

03 Press and hold

Press the same key for more than 2 seconds.

Wait for startup to finish before sending a controller command.

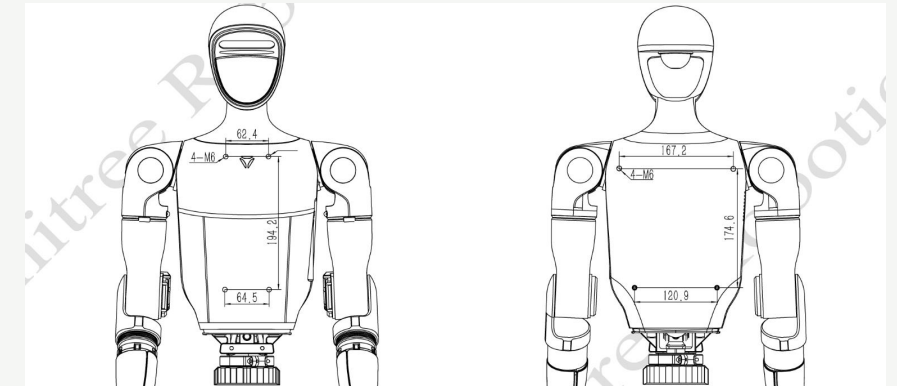

BATTERY AREA ON THE REAR TORSO

Controller power-on



- 1 Short-press the power key once.
- 2 Then press and hold for more than 2 seconds.
- 3 Confirm the controller is ready before posture commands.

Basic posture commands



Hold L2

L2 + X

Stand

L2 + A

Squat

L2 + B

Damping mode

Use damping mode only when the robot is supported and ready to be laid down.

Shutdown and lay-down


- | | | |
|----|----------------------|---|
| 01 | Stop movement | Wait until the robot is stable. |
| 02 | Squat | Use L2 + A. |
| 03 | Support and lay down | Guide the robot to a face-up position. |
| 04 | Damping mode | Use L2 + B only after the robot is supported. |
| 05 | Power off | Turn off the robot, then turn off the controller. |

Confirm that both devices are fully off before adjusting the packing pose.


Face-down starting position

Note

Before packing, please make sure the robot is face down as shown in the picture.

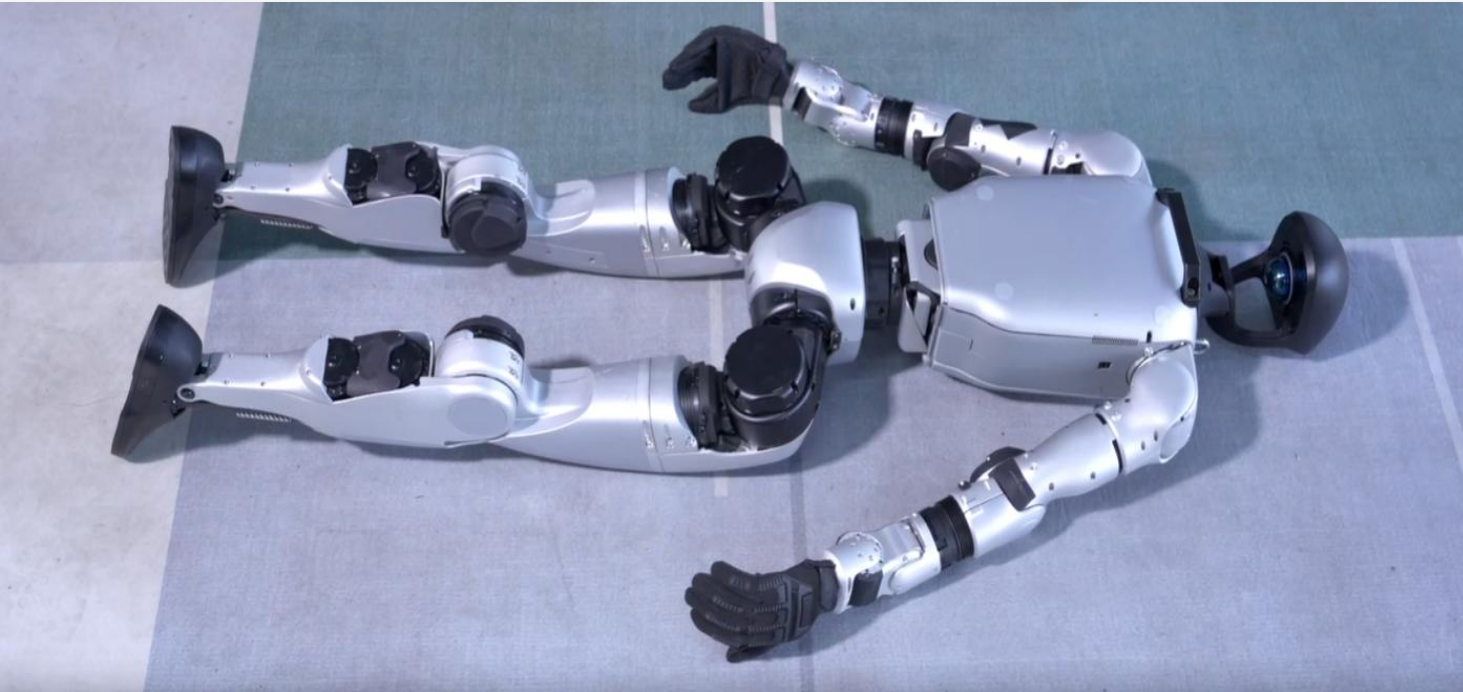

Packing position and final check

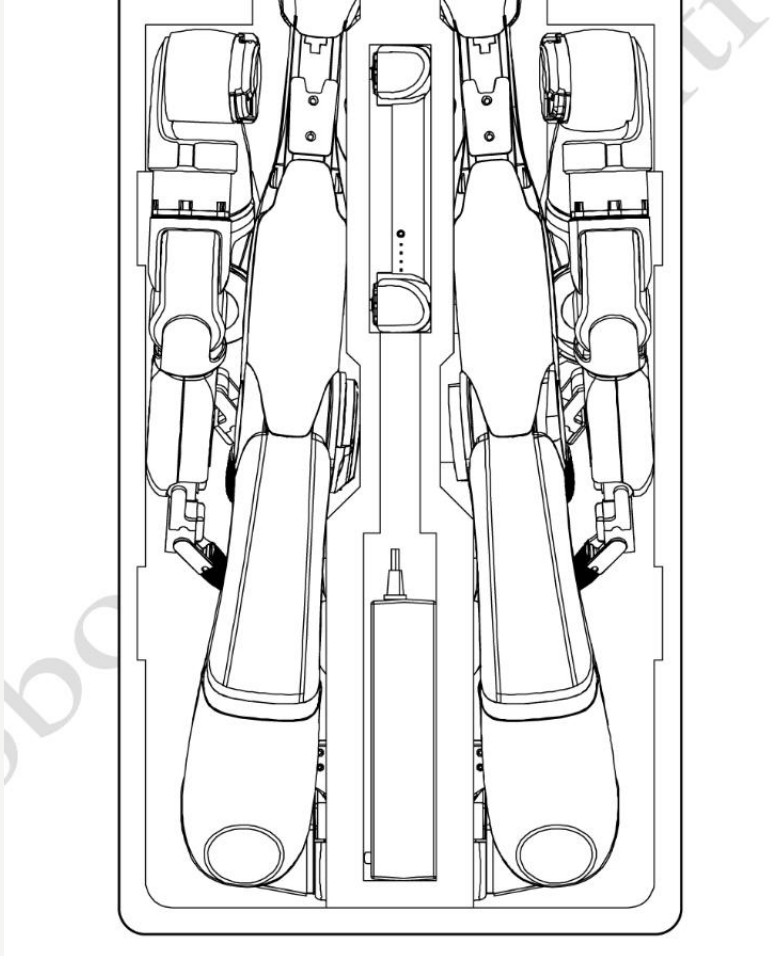

Adjust the pose

Align the arms and legs with the foam insert. Move each joint gently.

Protect the robot

Check that fingers, cables and covers will not be trapped.

Complete the kit

Return the controller, charger, padding and accessories to their positions.